

CRIMPER: OPERATING INFORMATION

MODEL CR: (ELECTRIC CRIMPER)

MODEL CECR: (ELECTRIC COUNTER/WRAPPER/BAGGER/CRIMPER)

1. Insert Crimping Head into black receiver on machine. "Push and Twist" to ensure crimping head is located and locked in place.
2. Turn machine "ON".
3. For, Pre-Crimped "Shotgun Shell" Style Wrappers:
Fill wrapper. Press the pre-filled coin wrapper firmly against crimping head till the wrapper is tight and a rolled seal has been formed.

For, Flat Style Wrappers:

Fill wrapper. Divide the extra paper evenly on each end. Back one of the open ends with your finger. Press the pre-filled coin wrapper firmly against the crimping head till wrapper is tight and a rolled seal has been formed. Repet on opposite end.

NOTE: Press at a steady rate (2-3 seconds). DO NOT FORCE. Let the crimper do the work.