

## **MODEL TC: TOKEN CLEANER**

### **INCLUDED:**

1. Vibratory Tumbler
2. 14" Green Sift Tray
3. 7lbs of Pre-Conditioned Cleaning Media

### **OPERATION:**

1. Fill the Vibratory Bowl with the included Cleaning Media.  
(Use All Cleaning Media provided).
2. Add Tokens/Coins (approx. 650qty). Do not overfill Vibratory Bowl and exceed limit of 18lbs (including media).
3. Place the Vibratory Bowl Cover on the Vibratory Bowl. Install the Flat Rubber Washer then the Flat Metal Washer on the Center Shaft.
4. Place the Clamping Nut on the Center Shaft and tighten in place. Tighten enough to keep the Vibratory Bowl Cover in place. Do not over tighten.
5. Plug the unit into a 120V receptacle and turn timer switch to the desired time position.  
**NOTE: The Tokens/Coins should "roll" in the media.**
6. Check coins or tokens periodically for desired cleanliness and continue as needed. (Cleaning process may take up to 3-4 hours, depending on condition)
7. When the cleaning is completed, turn the timer switch to the OFF position and unplug the Tumbler.
8. Remove the Vibratory Bowl Cover and Bowl from base of machine.
9. Place the included Sift Tray on any 5-gallon bucket and pour Media and Tokens/Coins from Bowl into Sift Tray.
10. Shake Sift Tray until all Cleaning Media is removed from Tokens/Coins.
11. Pour Cleaning Media back into Bowl, reinstall onto base of machine and store until next use.